

	Hours	2	10	12.5	25	37,5	50	62,5	75	87,5	100	112,5	125	137,5	150	162,5	175	187,5	200	212,5	225	237,5	250	262,5	275	287,5	300	6 mois	1 an	5 ans	
cylinder: control of ovality	cf table						x*			x*				x			x*			x											
replacement gaskets,cylinder head, exhaust and other	check						x*			x*			x			x*			x			x									
Inspection of the axes of the pistons	>17,97 mm											x																			
Inspection of bearing rods												x																			
crankshaft																															
Inspection of crankshaft	maximum runout 0,03 mm											x																			
ext spinner replacement joints if necessary												x																			
General revision engine																											x(1)		x		
engine section																															
inspect the engine mount	cracks, corrosion						x			x			x			x			x			x				x	x	x	x	x	
inspect engine blocks elastic fixation	cracks, fixing		x		x	x		x		x	x		x		x	x		x	x	x	x	x	x	x	x	x	x	x	x		
change engine blocks elastic fixation																										x				x	
inspect the entire engine exhaust	cracks, corrosion	x		x		x		x		x		x		x		x		x		x		x		x	x	x	x	x	x	x	
inspect the electrical wiring	connection, oxydation	x		x**		x**		x**		x**		x**		x**		x**		x**		x**		x**		x**	x**	x	x	x	x		
inspect the battery, terminals, ferry	fixation, connecting		x**		x**		x**		x**		x**		x**		x**		x**		x**		x**		x**	x**	x	x	x	x	x		
cockpit																															
inspect the fuel tank, fixation	fixation		x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
inspect the fuel cap and hoses	connecting	x		x		x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
inspect window	cracks, fixation		x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
inspect safety belts	cracks		x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
inspect the elevator control	fixation, lubrication		x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
grease the ball joints	lubrication		x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
inspect the aileron control	fixation, tension		x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
Fuselage																															
inspect the condition of coating aluminum	corrosion, cracks					x***			x***			x***			x***			x***			x***				x***	x	x	x	x		
inspect the condition of composite parts	corrosion, cracks					x***			x***			x***			x***			x***			x***				x***	x	x	x	x		
inspect fasteners Component Management	fixation		x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
Lubricate hinges Component Management	lubrication		x**		x**	x**		x**		x**		x**		x**		x**		x**		x**		x**		x**	x**	x	x	x	x		
inspect the controls	cable fixing		x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
Lubricate the cables controls	lubrication		x**		x**	x**		x**		x**		x**		x**		x**		x**		x**		x**		x**	x**	x	x	x	x		
Landing gear																															
inspect composite spring	Cracks		x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
Tightening the screws			x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
inspect tires	condition		x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
check tire pressure	between 2,0 et 2,2 bars		x**		x**	x**		x**		x**		x**		x**		x**		x**		x**		x**		x**	x**	x	x	x	x		
make clean wheels and brake disk	cleaning															x***											x***	x	x	x	
inspect the nose wheel	fixation		x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
grease the axis of the nose wheel	lubrication		x**		x**	x**		x**		x**		x**		x**		x**		x**		x**		x**		x**	x**	x	x	x	x		
inspect spring dampers nose wheel			x		x	x		x		x		x		x		x		x		x		x		x	x	x	x	x	x		
change spring dampers nose wheel																									x***		x	x	x		

